

INSTRUCTION MANUAL  
FOR  
REGULATED POWER SUPPLIES

LL SERIES

THIS MANUAL APPLIES TO UNITS  
BEARING SERIAL NO. PREFIXES A-D

This manual provides instructions intended for the operation of Lambda power supplies, and is not to be reproduced without the written consent of Lambda Electronics Corp. All information contained herein applies to all LL models unless otherwise specified.

G-2095-6

LAMBDA ELECTRONICS CORP.

MAIN PLANT TELEPHONE: 516 694-4200

MELVILLE, L.I., N.Y.